

## AM200 User's Guide



STANDARD FIXED HEAD



130'



512hz Built in Sonde




# TABLE OF CONTENTS

---

Diagram & Equipment Specifications.....	4
Equipment Specifications & Safety Instructions .....	5
Control Panel .....	6
Control Panel cont. with Diagram.....	7
AM200.....	8
AM200 Sonde Operation .....	9
AM200 DVR Operation.....	9
Trouble Shooting .....	10-16
Warranty Information.....	17-18

# DIAGRAM & SPECIFICATIONS

---

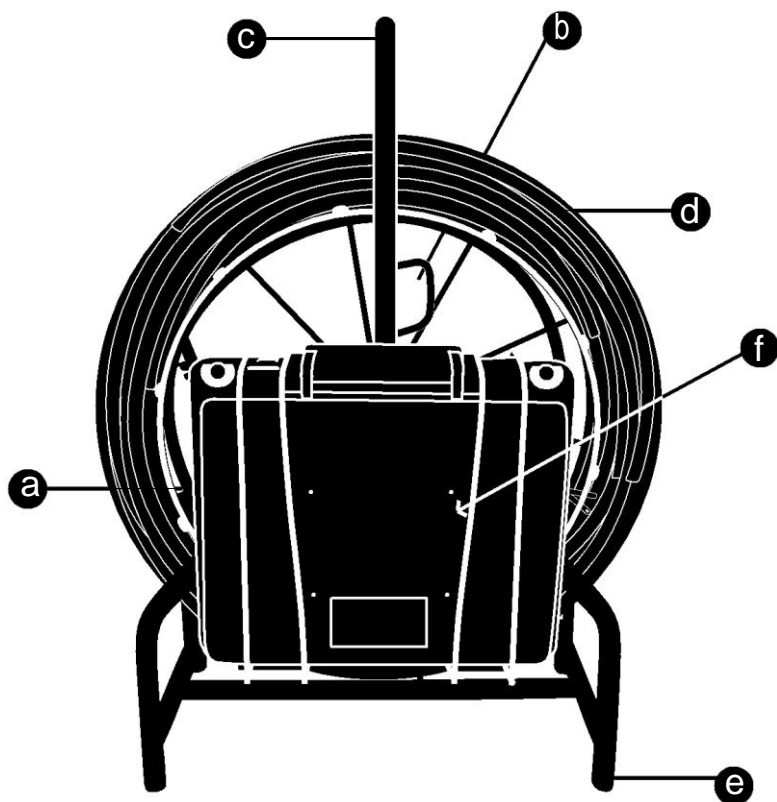

- A. Camera Head
- B. Cable Guide
- C. Powder Coated Frame
- D. Heat Treated Epoxy Sealed SV Cable
- E. Rubber Feet
- F. Control Box

Included Not Pictured  
- 7" LCD Color Monitor  
- 512 hz Built in Sonde

# EQUIPMENT SPECIFICATIONS

---

- **AM200 Standard Fixed Head**

Dimension: 1.38" Diameter

Pipe Size: 2" Pipe + (2" Pipe Depends on Condition of Pipe)

- **High Tension Inspection Cable** Push Capacity:

100' – 500' (depending on condition of line)

- **Powder Coated Steel Reel**

20" in Diameter

- **Camera Material**

Stainless Steel

- **Depth Rated**

Submersible to 25'

# SAFETY INSTRUCTIONS

---

1.) Keep all buttons, handles, switches clean of oils & grease. Please avoid setting monitor directly in water.

2.) Prior to use inspect all buttons, handles, switches to make sure they are in working order. If equipment is malfunctioning please do not operate. See trouble shooting guidelines in back of manual.

# CONTROL PANEL

---

Please view diagram 1.A on page 7 for control panel. Main Controls:

Dimmer Control – Dim LED Lights as Needed


Video Out Put

Sonde – Turn on to activate 512 Hz Sonde

Power Switch – Turns on the main power to the entire system

# CONTROL PANEL 1.A

---

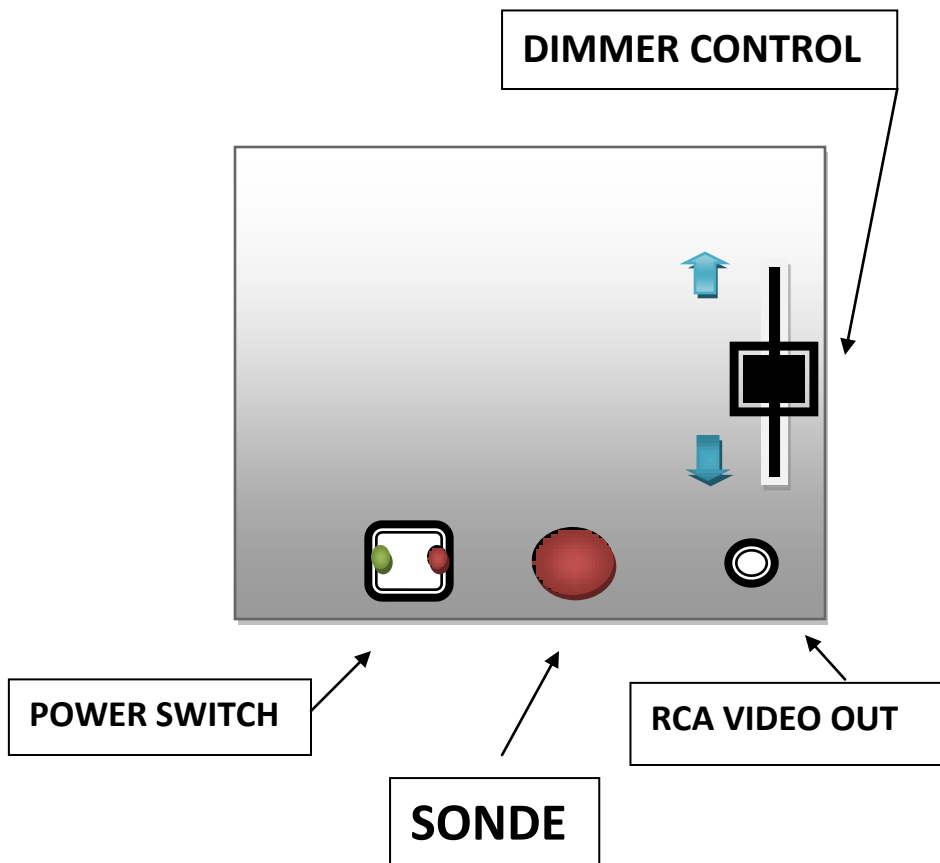

## AM200 Inspection Camera

Once you have inspected all components to make sure that they are not damaged or broken, plug the unit into an outlet. At that time the LED indicator light on the power switch will be red. Press the power switch and it will turn green turning the power on to the unit. You may need to press the power switch on the monitor if this is the first time the system has been started. You do not need to power the monitor off after use as the main power switch will do this for you.

Check to see if the lights on your camera head are on. If they are proceed to the next step, if they are not check your power receptacle and refer to the trouble shooting section of your manual.



## **SONDE Option:**

Your camera came equipped with a 512 Hz transmitter, built inside the camera head. Please refer to the previous diagram 1.A to activate the built in transmitter. Simply press the sonde switch located on the main control panel. The switch will light up red. You will need to be sure to have your locator set to 512Hz or you will not be able to locate the transmitter.

- NOTE when sonde is activated you will have a scrambled video signal or no signal at all.

## **DVR Option:**

Your camera also came with a DVR. This will allow you to record the image that you see. You will need a 2-32GB SD card to capture the video. Insert the SD card. Press the V2 Button on your monitor (please refer to your monitor manual), and follow the on screen instructions.

# TROUBLE SHOOTING

---

The trouble shooting guide lines below are designed to help you out in the field. If you cannot figure out the problem or fix it without voiding your warranty, please call the number listed in the back of your manual to speak with a repair technician.

## **LIGHTS TURN ON – NO VIDEO**

Possible problems: -

Monitor Not Functioning

-Faulty Video Cable

-Broken or loose connection in Camera Head

### **TRY THIS:**

First plug the camera system into another monitor or standard television that accepts standard RCA connections. If you get a picture then you know the problem is located in your monitor.

If you still have no picture on another monitor try changing the video cable that goes from your reel to your monitor. Any standard RCA adapter will work with your camera system.

If you have no picture with a new cable and another monitor then the problem is located with the camera system. Call the repair department to get the proper instructions on how to have the equipment diagnosed.

# TROUBLE SHOOTING

---

## **VIDEO WORKS–LIGHTS DON'T TURN ON**

Possible Problems:

- Lights Burnt out
- Dimmer Control Switch Turned Down
- Dimmer Control Switch Broken
- Broken or loose connection in Camera Head.

### **TRY THIS:**

Turn dimmer control all the way down and then all the way back up. Check to see if GFCI is working properly with the camera system. If problem still persists please contact the repair department to have unit diagnosed.

## **NO LIGHTS - NO VIDEO**

Possible Problems:

- Broken or damaged control box.
- Damaged or faulty connection with in camera head

# TROUBLE SHOOTING

---

Please call the repair department for instructions on how to have the equipment diagnosed.

## **HORIZONTAL WAVY LINES ACROSS SCREEN**

Possible Problems:

- 512 Hz Transmitter Built in Head is in the ON position.
- Faulty Video Cable
- Dirty Monitor

# TROUBLE SHOOTING

---

## TRY THIS:

If the transmitter that is built inside the camera head is in the ON position, the frequency that it puts out interferes with the camera head frequency, and will create wavy lines across your monitor. Inspect your pipe and then locate to avoid picture distortion.

If your equipment is not equipped with a transmitter built in the head or you have lines across your screen while it is in the OFF position try changing the video cable that goes from your reel to your monitor. Any standard RCA adapter will work with your camera system.

If the suggestions above have not eliminated the problem there is a possibility that your MONITOR or RECORDING DEVICE is dirty and needs to be cleaned. See Monitor Instruction Booklet for cleaning instructions. If problem persists please contact a repair technician at Amazing Machinery.

# TROUBLE SHOOTING

---

## **“NO SIGNAL” FLASHING ON MONITOR**

Possible Problems:

-Wrong setting set on Monitor or Recording

Device -Faulty Video Cable

-Broken or damaged monitor or recording device

-Broken or loose connection in camera head or control box.

### **TRY THIS:**

Read Monitor or Recording Device instruction manual to make sure you are on the proper settings. Be sure to check the batteries in all remote controls.

If you are on the proper settings plug the camera system into another monitor or standard television that accepts standard RCA connections. If you get a picture then you know the problem is located in your monitor.

If you still have no picture on another monitor try changing the video cable that goes from your reel to your monitor. Any standard RCA adapter will work with your camera system.

If you can play back on the Monitor or Recording Device and none of the solutions above have worked, the equipment will need to be diagnosed by a technician please call the repair department.

# TROUBLE SHOOTING

---

## **BLURRY OR SCRAMBLED PICTURE**

Possible Problems:

- Monitor Broken or Damaged
- Seal broken or compromised
- Moisture in head
- Camera Head Fried
- Faulty Video Cable

### **TRY THIS:**

First plug the camera system into another monitor or standard television that accepts standard RCA connections. If you get a clear picture then you know the problem is located in your monitor. (See monitor instructions)

If you still have a blurry or scrambled picture on another monitor try changing the video cable that goes from your reel to your monitor. Any standard RCA adapter will work with your camera system.

Look at camera head and check for any type of moisture. If head has been tampered with or abused a seal may have broken and allowed moisture into the head. This would cause a blurry or scrambled picture. Camera System should then be diagnosed by a repair technician.

# TROUBLE SHOOTING

---

## **COLORFUL IMAGES DISTORTED COLORS**

Possible Problems:

- Monitor Broken or Damaged
- Seal broken or compromised
- Moisture in head
- Camera Head Fried
- Faulty Video Cable

### **TRY THIS**

First plug the camera system into another monitor or standard television that accepts standard RCA connections. If you get a clear picture then you know the problem is located in your monitor. (See monitor instructions)

If you still have a distorted or bright colorful images on another monitor try changing the video cable that goes from your reel to your monitor. Any standard RCA adapter will work with your camera system.

Look at camera head and check for any type of moisture. If head has been tampered with or abused a seal may have broken and allowed moisture into the head. This would cause the camera head to fry and create strange distorted colors to form on the screen. Camera System should then be diagnosed by a repair technician.



# WARRANTY INFORMATION

---

## LIMITATION OF LIABILITY

NOTE - All Warranties offered by or passed through Amazing Machinery to you the customer include parts only, no labor or freight charges will be accepted under warranty claims.

NOTE -All Amazing Machinery and Factory Warranties are not transferable.

NOTE -The warranty contained herein is in lieu of all other warranties express or implied, including any implied warranty of fitness for particular purpose.

NOTE - It is understood that a manufacturers limited warranty pertains to equipment used in it's prescribed manner, without abuse, and does not include wear and tear.

NOTE - All freight charges incurred on warranty situations are the responsibility of the customer.

NOTE - Amazing Machinery and Equipment Manufacturer liability for special, incidental, or consequential damages is expressly disclaimed. In no event shall any liability exceed the purchase price of the product in question.

NOTE - Specifications, Warranties and Pricing are subject to change without notice.

\*Refund does not include shipping/handling fees. No refund will be given for installation kits. Customer is responsible for lost or misdirected packages. It is recommended that the customer insure the package for its full retail value. This warranty does not cover or include any damage as a result of acts of God, improper installation, alteration, negligence or abuse.

Manufacturer will, at its option, replace or repair without charge to the original purchases, any part or parts manufactured by it and found, upon examination, to be DEFECTIVE IN MATERIAL AND/OR WORKMANSHIP if received for such examination within the stated warranty period (2 YEARS), which begins on the date of original purchase.

Damage resulting from accident, abuse, or neglect are conditions under which warranty cannot be claimed. Nor will warranty apply to damage resulting neither from failure to follow the manufacturer's instruction for operation and maintenance nor from the improper selection of a particular application.

All transportation charges on, and damage and loss incurred in connection with the transportation of parts submitted for replacement or repair under this WARRANTY shall be borne by the purchaser.

No other warranties, guarantees, or liabilities, either implied or expressed, will be the responsibility of Amazing Machinery.

For warranty or service work please contact Amazing Machinery.

Read the following information for contact details.

Amazing Machinery, Inc.  
2160 South Lee Hwy.  
Cleveland, TN 37311  
1 (800) 504-7435

